


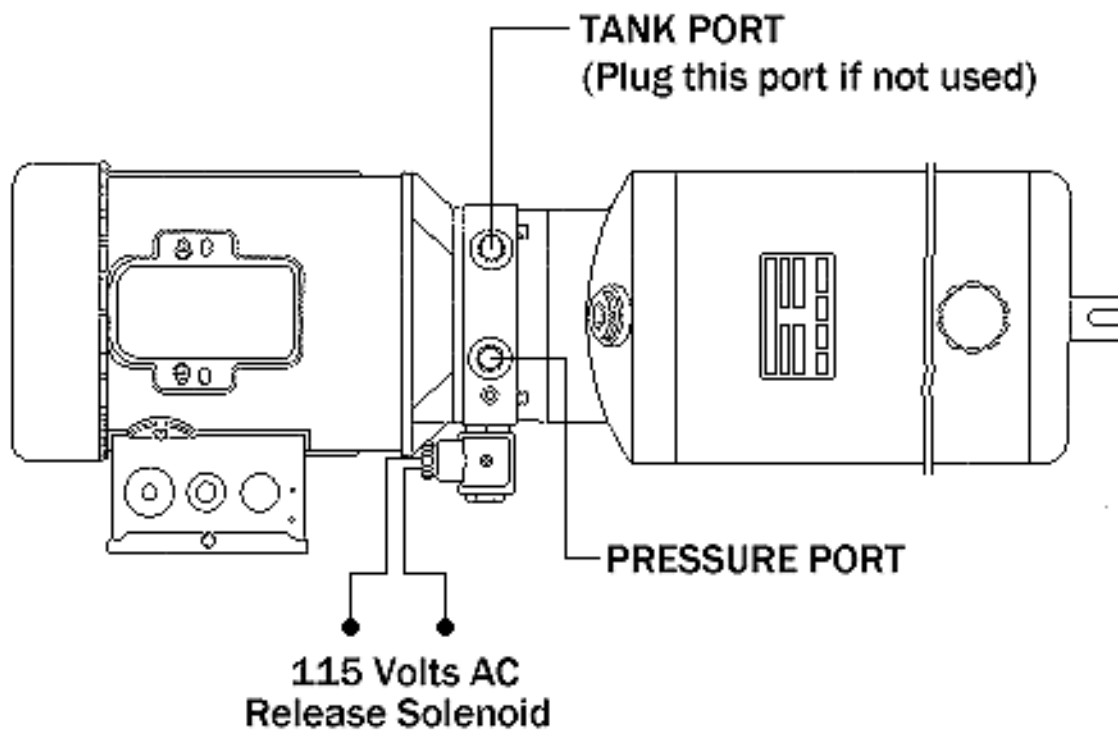

- Power the motor to extend a single acting cylinder.
- Power off to hold the cylinder in position.
- Energize the Release Solenoid to return oil to the reservoir.