



When Pressure Is Below Switch Setting

Main Contacts

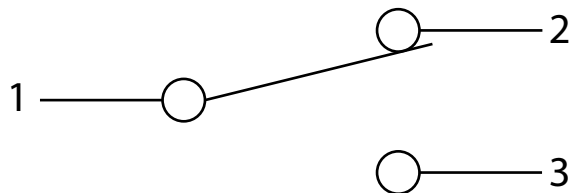


Secondary Contacts

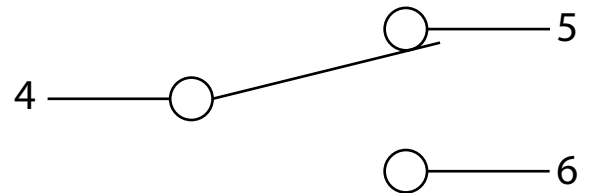

When Pressures Rises Above Setting On Switch

Main Contacts

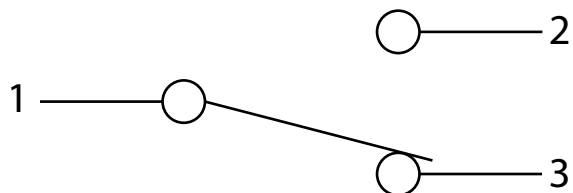

Secondary Contacts

