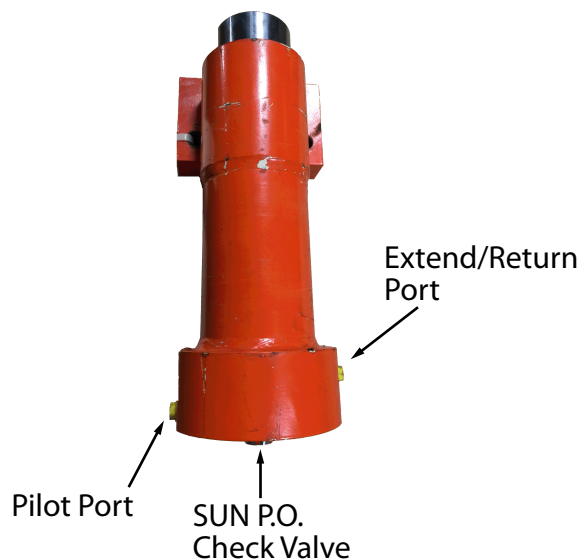
**Plumbing Option 1****Plumbing Option 2**

Remove the SUN check valve, plug the cavity and one of the two cylinder ports (extend/return or pilot). Use the remaining port as extend/return.
A port plug must be purchased from SUN Hydraulics to plug this port as it is not a standard port size.