


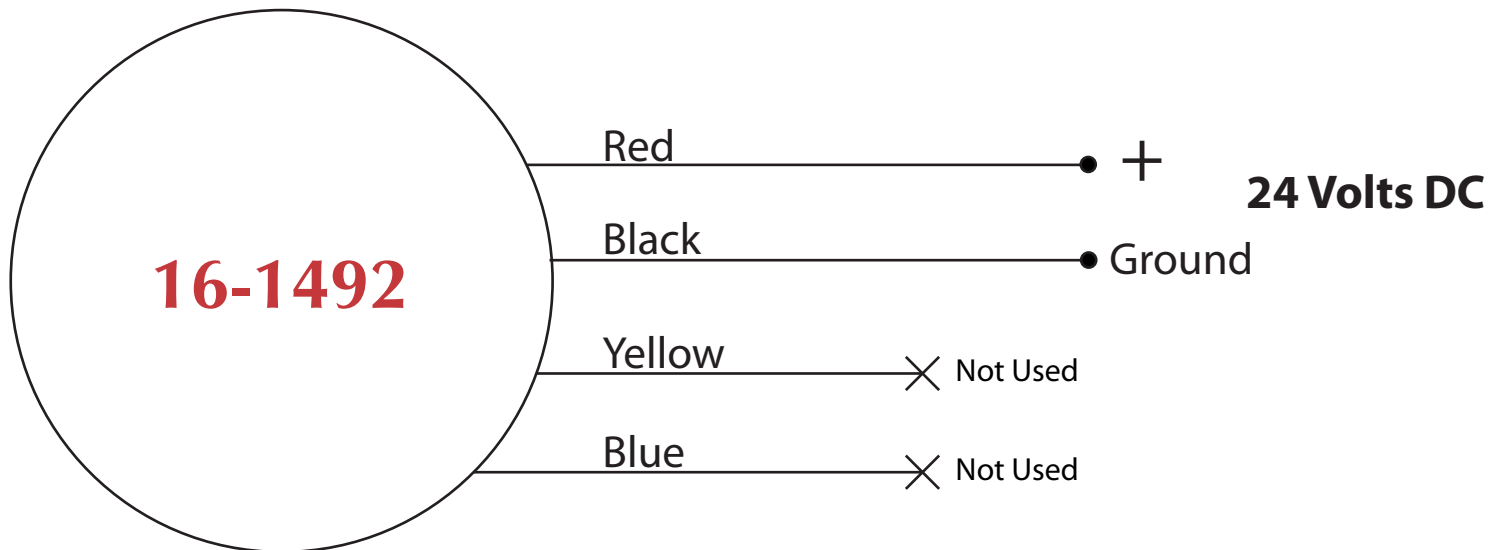

The Yellow and Blue wires are not needed for this blower to function. Isolate these wires if you will not be using them.