


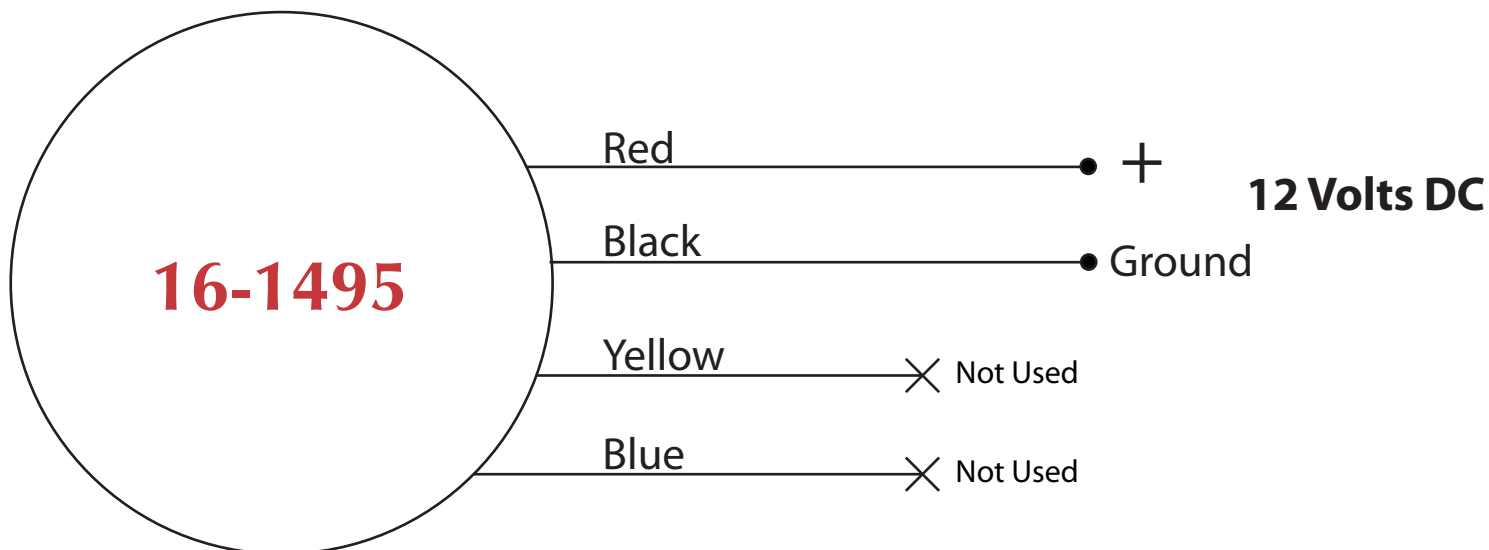

The Yellow and Blue wires are not needed for this blower to function.  
Isolate these wires if you will not be using them.